


Owner Manual For Motorized Treadmill T940

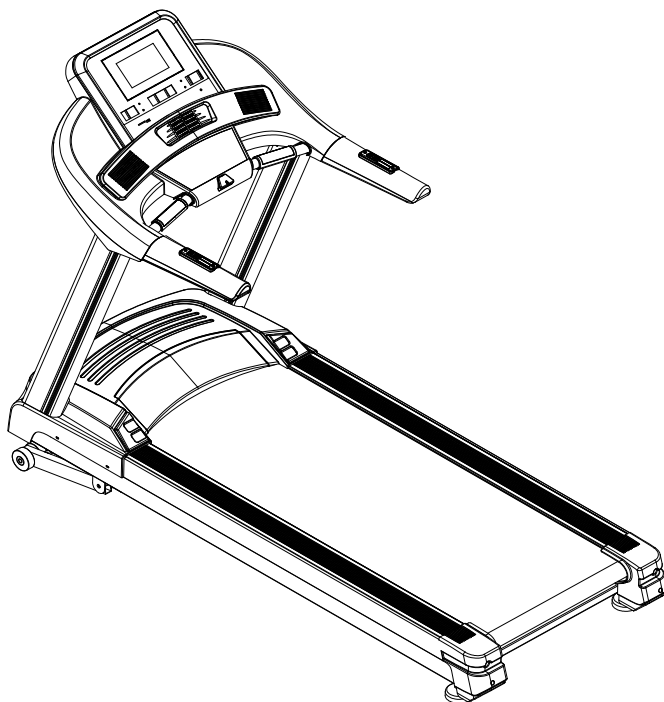

Please read all precautions and instructions in this manual before in detail before using this equipment. Save this manual for future reference.

Contents	1
Safety Caution	2-3
Assembly instruction	4-6
Operation guide	7-12
Program chart	13
Suggested stretches	14-15
Maintenance	16-17
Exploded drawing	18
Part list	19
Trouble shooting guides	20

Carton size (mm)	1810*770*1250	Voltage	220V-240V 50/60HZ
Fold size (mm)	975*720*1375	Motor power	AC 3.0CHP/6.0HPP
Running area (mm)	580*1500	AMPS	10A
Gross weight	135KG	Speed range	1.0-24.0 km/h
Max user weight	180 KG		
LCD display	Speed Time Distance Calories Pulse		

SAFETY CAUTIONS

When using this product, basic precautions should always be followed, including the following:
Please read the instruction carefully before starting to use this product.

Danger – To reduce the risk of electric shock:

1. Always unplug this product from the electrical outlet immediately after using and before cleaning.

Warning – To reduce the risk of burns, fire, electric shock, or physical injury:

1. The product should never be left unattended while plugged in. Unplug the product from the outlet when not in use.
2. Close supervision is necessary when this product is used by or near children, invalids, or disabled persons.
3. Be sure to use the product only for its intended use as described in this manual. Do not use any attachment not recommended by the manufacturer in order to avoid any danger or accidents.
4. Never operate the product if it has a damaged cord or plug, if it is not working properly, if it has been damaged, or dropped into water. Please return the product to the service center of seller for examination and repair.
5. Do not carry this product by the supply cord or use the cord as a handle.
6. Keep the cord away from hot surfaces or ground.
7. Never operate the product with the air vents blocked. Keep the air vents free of lint, hair, etc.
8. Never drop or insert any objects into any openings.
9. Do not use or operate outdoors.
10. Do not operate where aerosol (spray) products are being used or where oxygen is thin.
11. Before turning the product power off, turn all controls to the off position then remove the plug from the outlet.
12. Connect the product to a properly grounded outlet only.
13. If the treadmill is foldable, when user finishes using the treadmill, the elevation needs to be back to original position.
14. When user is using the treadmill, it can not be folded at the same time.
15. Keep a safety zone of 2000mm x 1000mm away from the treadmill.
16. This machine is only intended for household use.
17. For the treadmill with folding function and electric elevation, be sure that the elevation is 0 before folding (To avoid interference of the components).
18. Stop using the treadmill if you feel faint, dizzy, or short of breath.
19. Wear appropriate exercise clothes when using the treadmill. Do not wear loose clothes that could become caught in the treadmill. Athletic support clothes are recommended for both men and women. Always wear athletic shoes. Never use the treadmill with bare feet, wearing only stockings, or in sandals.

SAFETY CAUTIONS**GROUNDING INSTRUCTIONS**

The products must be grounded first. If malfunction or breakdown occurs, grounding will provide a path of least resistance for electric current to reduce the risk of electric shock.

The product is equipped with a cord having an equipment-grounding conductor and a grounding plug.


The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Danger – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the products are properly grounded. Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet install by a qualified electrician.

The products is for use on nominal 220-240 volt and has a grounding plug that looks like the plug illustrated in the figure . Make sure that the product is connected to an outlet having the same configuration as the plug.


There is no need to use any adapter for this product.

Figure
Grounding methods

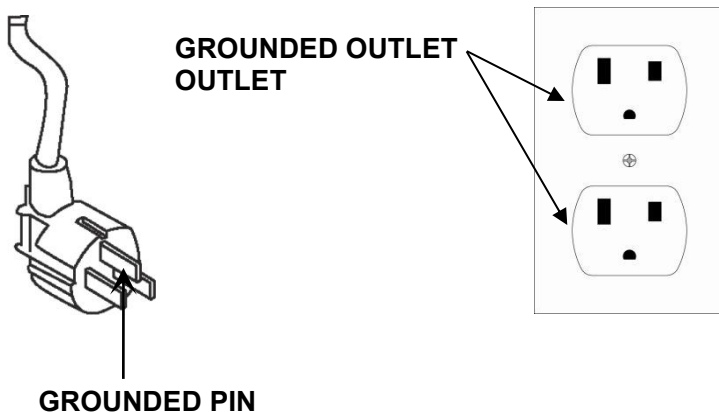


ASSEMBLY INSTRUCTIONS


When you open the package you will find all parts of the treadmill, shown as the pictures

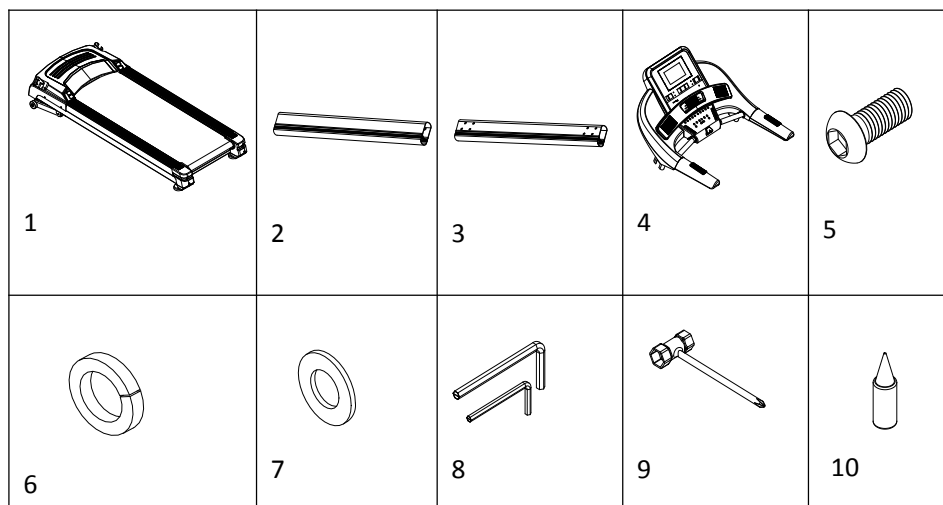

No.	Description	Q'ty
1	Main frame	1
2	Left upright	1
3	Right upright	1
4	Console	1
5	Bolt	20
6	Washer	20
7	Nut	20
8	Wrench 5# & Wrench 6#	1
9	Screw driver and wrench	1
10	Lubricant	1

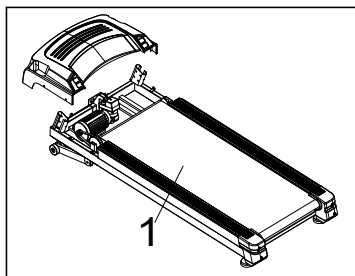
Step 1 :

1. Open the carton box and place the main frame on flat floor. Use Screw driver and wrench (9) to open the motor cover.

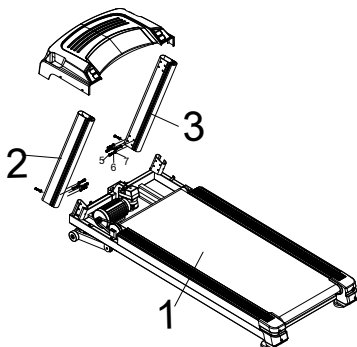Step 2 :

1. Insert the left upright (2) and right upright (3) into the main frame (1), and use the 5# wrench (8) to fasten the left & right upright to the main frame with 10pcs M8x15 bolt (5), 10pcs washer M8 (6) and 10pcs nut (7).
2. Insert the motor cover into the left and right upright (2)(3).


Notice: Connect the whole set cable of the main frame according to the gap direction of the connector. Pay attention to avoid to damage the insulation layer of the whole set cable in brutal force or make the pins of the plug banded, which causing the useful whole set cable can not correctly link.

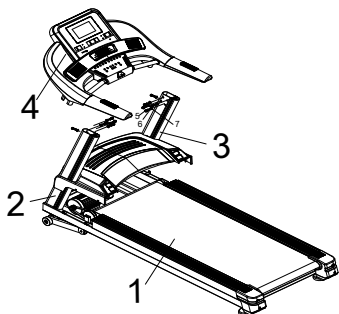Step 3 :

1. Insert the console (4) onto the right and left upright (2) (3). Contact the wire between the console and right upright.

Notice: Pay attention to avoid to damage the contact wire.

2. Use the washer 5# to light fasten the console to the left & right upright (2) (3) with 10pcs M8x15 bolt (5), 10pcs washer M8 (6) and 10pcs nut (7).
3. Use the washer 5# 6# to fasten all bolts.

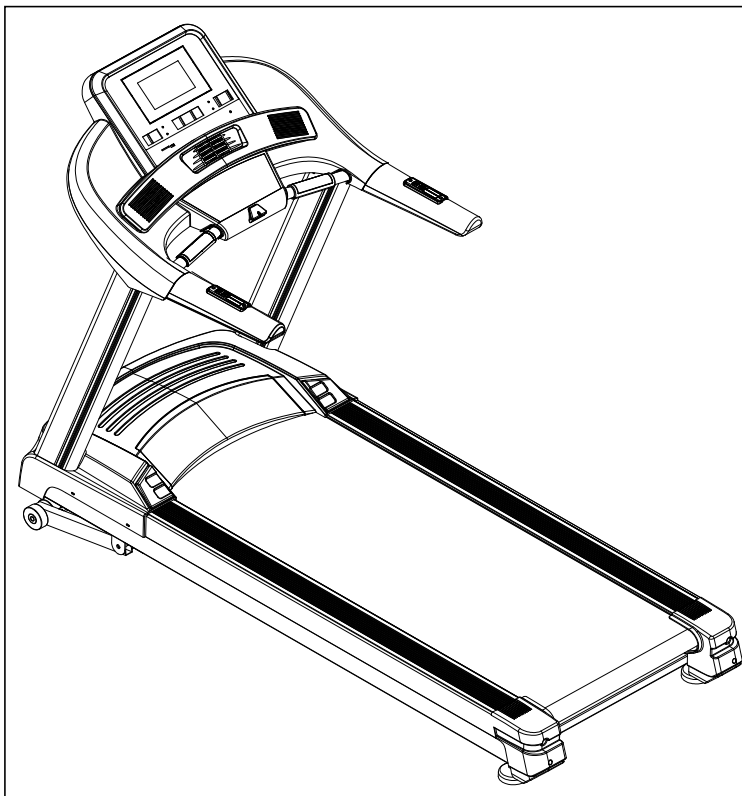Step 4:

NOTE: For your safety and comfort, please check if all screws are fastened
Congratulation! A brand new motorized treadmill has been successful assembled!

OPERATION GUIDE

GENERAL SAFETY TIPS

- A.** Practice mounting and dismounting your treadmill before beginning your workout.
- B.** Attach the Safety Key to the Computer (the treadmill will not operate without the Safety Key). Clip the other end of the Safety Key to your clothing before exercising to ensure the treadmill will stop if the user accidentally walks off the Treadmill.
- C.** If the user falls off the Treadmill, the Safety Key will come off the Computer and the treadmill will stop at once to avoid further injury.
- D.** Do not stand on the Walking Belt while starting the Treadmill. Straddle the Belt and stand on the plastic Foot Rails.
- E.** The Treadmill will start at 1.0KM/H after a 3 seconds countdown. If you are a new user, stay at a slow speed and hold onto the Hand Grips until you become comfortable.

QUICK REFERENCE GUIDE



OPERATION GUIDE

DISPLAY FUNCTION

DISTANCE: Accumulates total workout distance from 0.0 to 99.90 kilometers.

TIME: Accumulates total workout time from 0:00 to 99:00 minutes, displays all ERRO messages.

CALORIE: Accumulates the user's calorie consumption from 0 to 999 Cal.

PULSE: When pulse is detected by grasping both stainless steel pick-ups on front handrails, it will display your current heart rate in beats per minute from 40 to 250.

INCLINE: Displays the current incline level from 1 to 20.

SPEED: Display current speed from 1.0Km/h to 24.0Km/h.

DOT MATRIX: Display program matrix on different level.

KEY FUNCTION

START: Start the treadmill belt.

STOP: Pause the treadmill belt.

PROGRAM: Press this key to select a desired program.

MODE: Press this key to set TIME, DISTANCE or CALORIE count-down on manual program. Press this key to set HRC program, CUSTOMER program, and BODY FAT function.

RESET: Press this key to quit setting of program, manual program, HRC program.

INCLINE UP/DOWN: Press these key to increase or decrease treadmill incline. Press this key to set elapse time of workout in any mode, or to set HRC program, incline on CUSTOMER program and BODY FAT function.

SPEED UP/DOWN: Press these key to increase or decrease treadmill speed, set the program level, set speed of CUSTOMER program.

QUICK INCLINE: Press these key to directly jump to a desire incline level.

QUICK SPEED: Press these key to directly jump to a desire speed level.

GETTING STARTED

NOTES:

1. Check to make sure nothing is on or will hinder the movement of the treadmill.
2. Plug in the power cord and turn on the power, the TIME window will display E07.
3. Stand on the foot rails of the treadmill.
4. Attach the safety key clip to your clothing.
5. Put the safety key into the safety key seat in the console, and then the treadmill will be on start/ready status.
6. There are 3 buttons on both handrails, right is SPEED +/- & STOP, left is INCLINE +/- & START, and it will perform same functions as SPEED +/- & STOP and INCLINE +/- & START buttons on the computer.

OPERATION GUIDE

7. During your workout in any mode, when you press STOP button, the treadmill will be paused, belt movement and incline will be slow down, if you want to resume your workout, press START button and all previous data will resume counting, treadmill belt will begin movement after a 3 seconds count-down. Press STOP button again after pausing the treadmill, the computer will return to start/ready status.

During selecting program or setting information, press RESET button will return to start/ready status.

8. You have two options to start your workout:

A. QUICK START

Simply press the START button to begin a work out.

B. SELECT A PROGRAM

Select manual program by pressing MODE button or pressing PROGRAM buttons to enter 24 preset programs, 1 CUSTOM program, BODY FAT function.

QUICK-START OPERATION

STEP 1: Attach the Safety key to wake display up; the treadmill then will be on start/ready status, the SCAN window will display MANUAL.

STEP 2: Press the START button to begin belt movement after a 4 second count-down. Use the SPEED +/- or DIRECT SPEED buttons to adjust the desired speed at any time during training; use the INCLINE +/- or DIRECT INCLINE buttons to adjust the Incline at any time during training. The speed and incline can also be adjusted by the buttons on handrail, the buttons on left handrail to adjust incline, the buttons on right handrail to adjust speed.

STEP 3: To get a pulse reading, simply grasp stainless steel pick-ups on front handrails. It may take a few seconds for the display to reach the actual number. The pulse rate will be displayed on PULSE window.

STEP 4: While training, you can press STOP button to pause your workout or pull safety key away from its position to shut down the computer. Press STOP button will pause the workout, if you want to resume your workout, you can press START button and all previous data will resume counting, treadmill belt will begin movement after a 4 seconds count-down. If you want to go to start/ready status, press STOP button again after pausing the treadmill.

STEP 5: During quick-start operation, TIME, CALORIE and DISTANCE will count up.

MANUAL PROGRAMS OPERATION**NOTES:**

Under this program, one of DISTANCE, CALORIE and TIME can be set count-down for your workout, the others will count up during your workout, after one count-down reach zero, program will be ended and stop the belt movement, if you need to continue, press the START button to begin belt movement after a 3 second count-down.

OPERATION GUIDE

STEP 1: Attach the Safety key to wake display up; the treadmill then will be on start/ready status, the SCAN window will display MANUAL.

STEP 2: Press MODE button, the manual program will be selected, and the TIME window will blink and display 30:00 minutes as lasting time, the SCAN window will display TIME COUNT, press INCLINE +/- buttons to set the desired value, you can set count-down TIME from 10:00 to 99:00.

If you do not like to set TIME for count-down and pass to others, press MODE button again, DISTANCE window will blink and display 5.0 KM as target count-down distance, the SCAN window will display DIST COUNT, press INCLINE +/- buttons to set the desired value, you can set count-down DISTANCE from 0.50 to 99.90.

If you do not like to set DISTANCE for count-down and pass to others, press MODE button again, CALORIE window will blink and display 100 as target count down calorie, the SCAN window will display CAL COUNT, press INCLINE +/- buttons to set the desired value, you can set count-down CALORIE from 5 to 999, the unit is cal.

STEP 3: If you need to resume selecting one of DISTANCE, CALORIE and TIME for count-down, press MODE button again to restart setting manual program.

STEP 4: After finishing setting count-down for your workout, press START button to begin belt movement after a 3 seconds count-down.

STEP 5: During the program you can adjust the speed and incline by pressing SPEED +/- buttons and INCLINE +/- buttons, or DIRECT SPEED and DIRECT INCLINE buttons to jump directly to a setting. The speed and incline can also be adjusted by the buttons on handrail, the buttons on left handrail to adjust incline, the buttons on right handrail to adjust speed.

STEP 6: Press STOP button to stop your workout or pull safety key away from its position to shut down the computer. Press STOP button will pause the program, if you want to resume the program, you can press START button and all previous data will resume counting, treadmill belt will begin movement after a 4 second count-down. If you want to go to start/ready status, press STOP button again after pausing the treadmill.

PRESET PROGRAMS P1-P24 OPERATION

NOTES:

All the preset programs are made up with 30 time-based segments; the speed and incline is preset on each segment. The elapse time of 30 segments on each program will be automatically arranged according to the time you set for your workout time.

There are 8 preset programs, and 8 different intensity levels on each program.

STEP 1: Attach the Safety key to wake display up; the treadmill then will be on start/ready status, the SCAN window will display MANUAL.

STEP 2: Press PROGRAM button to scroll through the 24 pre-set programs, 1 CUSTOM programs, BODY FAT function. A program will be selected once you press PROGRAM button, the program number from P1- P24.

OPERATION GUIDE

BODY FAT SCALE

This function is to estimate your body fat according to the basic information of you body condition.

This estimate is not exact and persons with medical conditions and/or a specific need for accurate body fat value should not rely on the estimations provided.

STEP 1: Attach the Safety key to wake display up; the treadmill then will be on start/ready status, the SCAN will display MANUAL.

STEP 2: Press PROGRAM button repeatedly until "BODYFAT" is displayed on the SCAN window. The computer will start BODY FAT analyzing function. The relative

parameter is GENDER, AGE, HEIGHT, and WEIGHT.

STEP 3: Press MODE button, the SCAN display SEX → F1(0), it represents GENDER, press INCLINE +/- button to set GENDER from 0 – 1, 0 represents MALE, 1 represents FEMALE.

STEP 4: Press MODE button again, the SCAN display AGE → F2 (25), it represents AGE, press INCLINE +/- button to set AGE from 10 – 99.

STEP 5: Press MODE button again, the SCAN display HEIGHT → F3(170), it represents HEIGHT, press INCLINE +/- button to set HEIGHT from 100 – 220.

STEP 6: Press MODE button again, the SCAN display WEIGHT → F4(70), it represents WEIGHT, press INCLINE +/- button to set WEIGHT from 20 – 150.

STEP 7: After finished setting all the necessary information of your body condition, press MODE button again, and grasp the heart rate sensor on the front handle for 8-15 seconds, then the SCAN window will display the Body Mass Index (BMI). If the BMI value is lower than 19, it means the body is THIN; if the BMI value between 19 and 26, it means FIT; if the BMI value between 26 and 30, it means OVER-WEIGHT; if the BMI is higher than 30, it means FAT.

USING THE PULSE FUNCTION


The Pulse Window on your Computer works in conjunction with the Pulse Sensors on both handrails. When you are ready to read your pulse:

1. Place both hands firmly on the Pulse Sensors. For the most accurate reading, it is important to use both hands.
2. Your estimated heart rate will display in the PULSE window approximately 6 seconds after you grasp the Pulse Sensors.
3. This estimate is not exact and persons with medical conditions and/or a specific need for accurate heart rate monitoring should not rely on the estimations provided.







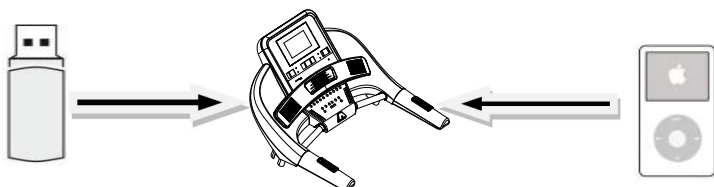

OPERATION GUIDE

USING THE AUDIO FUNCTION

As the figure shows, plug one end of the audio cable to the audio jack on computer, and then plug the other end of the audio cable to MP3 player. The speaker on the computer will then play the music from MP3 player. The volume of speaker can only be adjusted by MP3 player.



BUILD-IN MP3 PLAYER FUNCTION

As the figure shows, insert your USB flash to the USB jack  , the build-in MP3 player on computer can read the MP3 information on USB flash. Press  to play the music information on USB flash, the volume of speaker can be adjusted by pressing buttons  or  , and you can choose the next or previous songs by pressing buttons  or  . During playing of the music, press button  will pause playing music, MP3 player will resume playing music by pressing  again.

Program chart

BUILD-IN PROGRAM CHART

SPEED CHANGES		1	2	3	4	5	6	7	8	9	10
Level 1	SPEED(KM/H)	3	3	6	5	5	4	4	4	4	3
	INCLINE	0	3	3	3	4	4	4	1	1	0
Level 2	SPEED(KM/H)	3	3	4	4	5	5	5	6	6	4
	INCLINE	2	2	2	3	3	3	3	4	4	2
Level 3	SPEED(KM/H)	2	4	6	8	7	8	6	2	3	2
	INCLINE	3	5	4	4	3	4	4	3	4	2
Level 4	SPEED(KM/H)	3	3	5	6	7	6	5	4	3	3
	INCLINE	0	3	3	2	2	5	5	3	3	2
Level 5	SPEED(KM/H)	3	6	6	6	8	7	7	5	5	4
	INCLINE	3	5	3	4	2	3	4	2	3	2
Level 6	SPEED(KM/H)	2	6	5	4	8	7	5	3	3	2
	INCLINE	0	3	3	3	4	4	4	1	1	0
Level 7	SPEED(KM/H)	2	9	9	7	7	6	5	3	2	2
	INCLINE	0	3	3	3	4	4	4	1	1	0
Level 8	SPEED(KM/H)	2	4	4	4	5	6	8	8	6	2
	INCLINE	1	1	4	4	4	5	5	4	3	2
Level 9	SPEED(KM/H)	2	4	5	5	6	5	6	3	3	2
	INCLINE	3	5	3	4	2	3	4	2	3	2
Level 10	SPEED(KM/H)	2	5	7	5	8	6	5	2	4	3
	INCLINE	1	5	6	8	12	9	10	9	5	3
Level 11	SPEED(KM/H)	2	5	6	7	8	9	10	5	3	2
	INCLINE	3	5	6	8	6	5	8	7	5	2
Level 12	SPEED(KM/H)	2	3	5	6	8	6	9	6	5	3
	INCLINE	5	7	5	8	6	5	9	10	6	2
Level 13	SPEED(KM/H)	2	5	6	9	7	8	5	2	3	2
	INCLINE	3	3	4	4	3	4	4	3	4	2
Level 14	SPEED(KM/H)	3	4	5	6	7	8	5	4	3	3
	INCLINE	0	3	3	2	2	4	4	3	3	2
Level 15	SPEED(KM/H)	3	5	7	7	8	7	7	5	5	4
	INCLINE	3	3	3	3	2	3	4	2	3	2
Level 16	SPEED(KM/H)	2	9	9	7	8	7	5	6	4	2
	INCLINE	0	3	3	2	4	5	5	3	3	2
Level 17	SPEED(KM/H)	2	4	5	6	5	7	8	8	6	2
	INCLINE	3	5	6	4	2	3	4	5	3	2
Level 18	SPEED(KM/H)	2	4	5	7	6	7	6	3	3	2
	INCLINE	3	4	5	6	8	7	5	6	4	3
Level 19	SPEED(KM/H)	3	4	5	6	7	8	5	4	3	3
	INCLINE	0	3	3	2	2	4	4	3	3	2
Level 20	SPEED(KM/H)	2	9	9	7	8	7	5	6	4	2
	INCLINE	0	3	3	2	4	5	5	3	3	2
Level 21	SPEED(KM/H)	2	6	9	9	9	9	9	6	3	2
	INCLINE	3	5	3	4	2	3	4	2	3	2
Level 22	SPEED(KM/H)	2	5	7	9	10	10	8	6	4	3
	INCLINE	1	5	6	8	12	9	10	9	5	3
Level 23	SPEED(KM/H)	2	5	7	8	10	10	10	5	3	2
	INCLINE	3	5	6	8	6	5	8	7	5	2
Level 24	SPEED(KM/H)	2	3	7	9	10	10	10	9	9	3
	INCLINE	5	7	5	8	6	5	9	10	6	2

SUGGESTED STRETCHES

A successful exercise program consists of a warm-up, aerobic exercise, and a cool-down. Do the entire program at least two and preferably three times a week, resting for a day between workouts. After several months, you can increase your workouts to four or five times per week.

Warming up is an important part of your workout, and should begin every session. It prepares your body for more strenuous exercise by heating up and stretching out your muscles, increasing your circulation and pulse rate, and delivering more oxygen to your muscles. At the end of your workout, repeat these exercises to reduce sore muscle problems. We suggest the following warm-up and cool-down exercises:

1. Inner Thigh Stretch

Sit with the soles of your feet together with your knees pointing outward. Pull your feet as close into your groin as possible. Gently push your knees towards the floor. Hold for 15 counts.

**2. Hamstring Stretch**

Sit with your right leg extended. Rest the sole of your left foot against your right inner thigh. Stretch toward your toe as far as possible. Hold for 15 counts. Relax and then repeat with left leg extended.

**3. Head Roll**

Rotate your head to the right for one count, feeling the stretch up the left side of your neck.

Next, rotate your head back for one count, stretching your chin to the ceiling and letting your mouth open. Rotate your head to the left for one count, and finally, drop your head to your chest for one count.



4. Shoulder Lift

Lift your right shoulder up toward your ear for one count. Then lift your left shoulder up for one count as you lower your right shoulder.



5. Toe Touch

Slowly bend forward from your waist, letting your back and Shoulders relax as you stretch toward your toes.

Reach down as far as you can and hold for 15 counts.



6. Calf-Achilles Stretch

Lean against a wall with your left leg in front of the right and your arms forward. Keep your right leg straight and the left foot on the floor; then bend the left leg and lean forward by moving your hips toward the wall. Hold, and then repeat on the other side for 15 counts.



MAINTENANCE

WARNING! Before performing any maintenance to your treadmill, always unplug the power cord from the surge protector.

CLEANING: Routine cleaning of your TREADMILL will extend the life of your treadmill.

WARNING! To prevent electrical shock, be sure the power to the treadmill is OFF and the unit is unplugged from the wall electrical outlet before attempting any cleaning or maintenance.

AFTER EACH WORKOUT: Wipe off the console and other treadmill surfaces with a clean, water dampened soft cloth to remove excess perspiration. **USE NO CHEMICALS.**


WEEKLY: Use of a treadmill mat is recommended for ease of cleaning. Dirt from your shoes contacts the belt and eventually ends up underneath the treadmill. Vacuum underneath the treadmill once a week.

DECK LUBRICATION: The walking belt has been pre-lubricated at the factory. However, it is recommended that the walking board be checked periodically for lubrication to ensure optimal treadmill performance. Every 10 days or 10 hours of operation, lift the sides of the walking belt and feel the top surface of the walking board as far under as you can reach. If you feel signs of silicone, no further lubrication is required. If it feels dry to the touch, lubrication is needed. Ask your retailer or call Service line for the type of silicone.

TO APPLY LUBRICANT TO THE WALKING BOARD

- 1) Position the walking belt so that the seam is located on top and in the center of the center of the walking board.
- 2) Insert the spray nozzle into the spray head of the lubricant can.
- 3) While lifting the side of the walking belt, position the spray nozzle between the walking belt and the board approximately 10cm from the front of the treadmill. Apply the silicone spray to the walking board, moving from the front of the treadmill to the rear. Repeat this on the other side of the belt. Spray approximately 4 seconds on each side.
- 4) Allow the silicone to 'set' for one minute before using the treadmill.

WARNING: Do not over-lubricate the walking board. Excess lubricant should be wiped off with a clean towel.

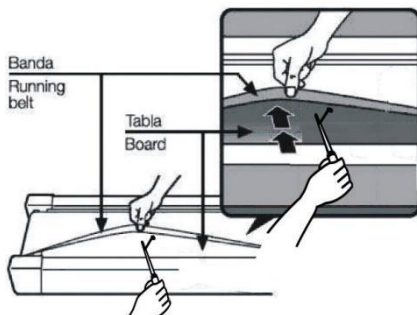


Running belt tension adjustment

The treadmill has been adjusted and passed QC inspection before leaving the factory. If there is phenomenon of bias running of the belt ,the possible reasons might be:


- A. The frame is not stably laid
- B. The user is not running on the centre of the running belt;
- C. The user's two feet are not using even strength.

For bias which can not be fixed automatically, try the following methods to fix the belt, as picture shown


If the belt tends to move to the right, you should turn the belt adjustment screw on the right in clockwise direction. We recommend you turn 1/4 turn each time and check how it works. If the belt remains slanting to the right ,then turn the belt adjustment screw on the left in counterclockwise direction 1/4,as shown in the picture A

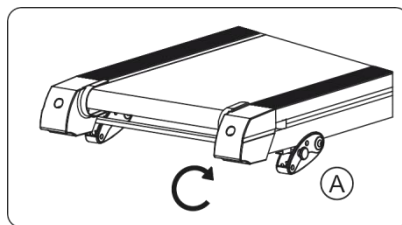


If the belt tends to move to the left, then turn the belt adjustment screw on the left in clockwise direction for 1/4 turn. If the belt remains slanting to the left ,then turn the belt adjustment screw on the right in counterclockwise direction for 1/4 turn, as shown in the picture B

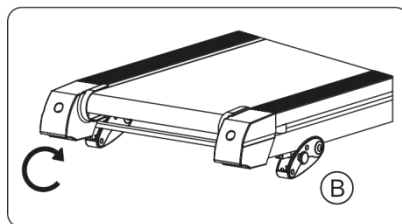

After having been used for a period, the belt might be slightly elongated, and slipping and halting might appear when a person is running on it. When these phenomena appear, you should secure the screws on both sides for 1/4 turn. If the belt is too tight, just loosen the screw on both sides for 1/4 turn, as shown in picture C.

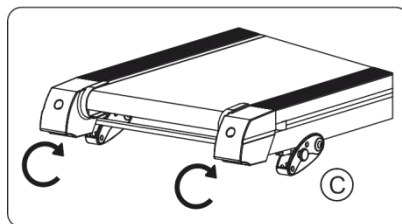

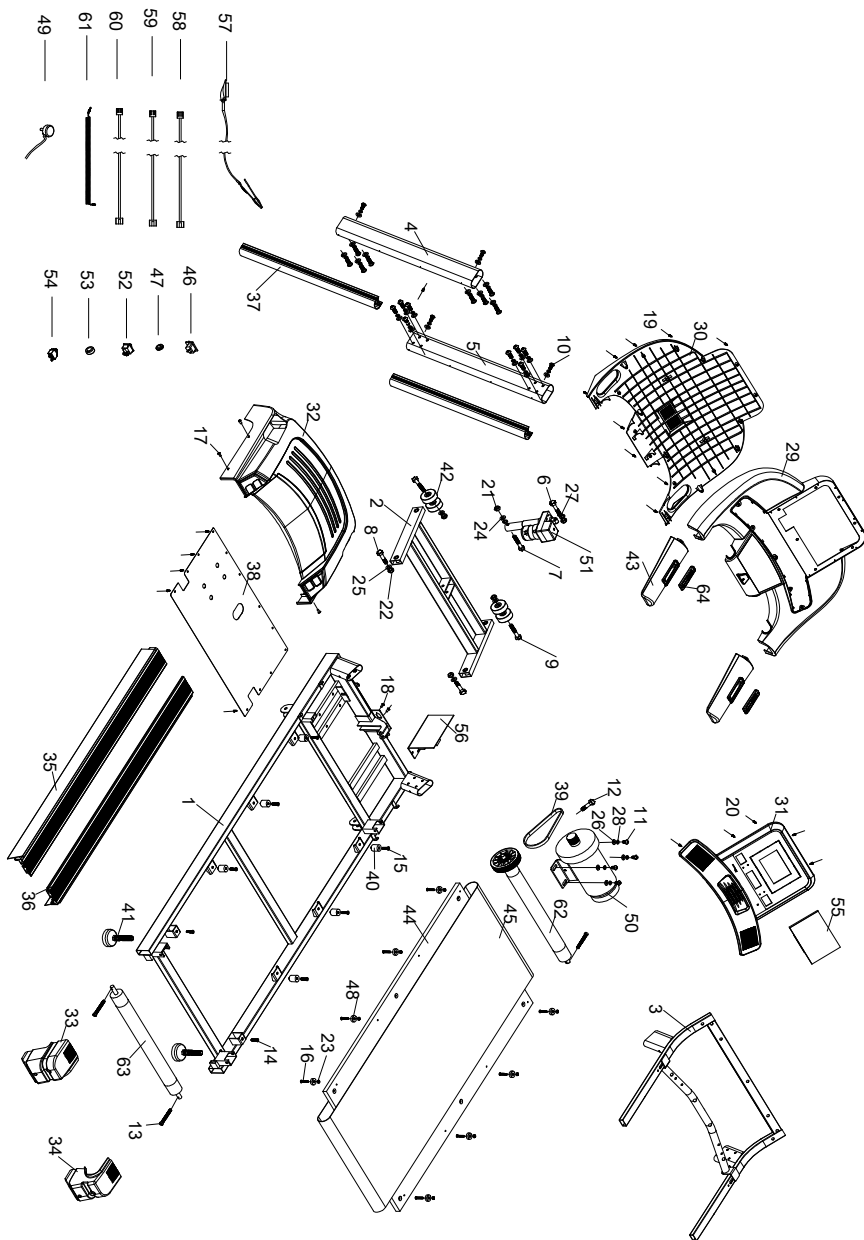

PART LIST

NO	DESCRIPTION	QTY
1	Main frame	1
2	Incline frame	1
3	Console	1
4	Left upright	1
5	Right upright	1
6	Bolt M10*40	1
7	Bolt M10*55	1
8	Bolt M12*45	2
9	Bolt M12*90	2
10	Bolt M8*15	20
11	Bolt M8*30	4
12	Bolt M8*45	1
13	Bolt M8*65	3
14	Bolt M8*30	2
15	Bolt M5*25	6
16	Bolt M5*30	8
17	Bolt M4*12	6
18	Bolt M4*12	2
19	Bolt M4*12	17
20	Bolt M4*12	8
21	Washer M10	2
22	Washer M12	4
23	Washer M5	8
24	Nut M10	2
25	Nut M12	4
26	Nut M8	24
27	Washer M10	2
28	Washer M8	24
29	Console box up	1
30	Console box down	1
31	Key board	1
32	Motor cover	1
33	Left end cap	1
34	Right end cap	2

NO	DESCRIPTION	QTY
35	Side rail	2
36	Side rail	2
37	Upright cover	2
38	Belly pan	1
39	Motor belt	1
40	cushion	6
41	Foot adjust kit	2
42	Move wheel	4
43	Handrail foam	2
44	Running board	1
45	Running belt	1
46	Power jack	1
47	Magnetic ring	1
48	Side rail cord	6
49	Power switch	1
50	Motor	1
51	Incline motor	1
52	Power cord	1
53	Magnetic ring	1
54	Circuit breaker	1
55	Console PCB board	1
56	Controller PCB board	1
57	Safety key	4
58	Contact wire 1	1
59	Contact wire 2	1
60	Contact wire 3	1
61	Mp3 wire	1

ERROR CODE	SYMPTOM
E01	No sensor information, Check the all wires to make sure contact well.
E02	The motor wire take off.
E03	No speed sensor information.
E05	Over load
E07	Safety off.